

INSTALLATION INSTRUCTIONS

GFCI CONVENIENCE OUTLET

3.0 Thru 6.0-Ton

Gas Electric, Self-Contained and Packaged

Heat Pump Units

RXRX-AN02

 **RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!**

WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS KIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION, ADJUSTMENT, OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE, POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

Parts List		
Part Description	Part Number	Quantity
Receptacle/Ground Fault	45-41954-01	1
Receptacle Cover	45-41953-02	1
Outlet Box	45-41952-02	1
Strain Relief	45-18753-01	1
Hex Head Screw (6-20 x 1/4)	63-22338-02	4

WARNING

BEFORE BEGINNING ANY MODIFICATION, BE SURE MAIN DISCONNECT SWITCH IS IN THE "OFF" POSITION. FAILURE TO DO SO CAN CAUSE ELECTRICAL SHOCK RESULTING IN PROPERTY DAMAGE, PERSONAL INJURY OR DEATH. TAG DISCONNECT WITH A SUITABLE WARNING LABEL.

Installation (See Figure 1)

- a. Shut off power to unit (see warning above).
- b. Remove control box access cover.
- c. Remove the receptacle mounting hole cover plate and gasket and discard.
- d. Install hole plugs in top and bottom of outlet box.
- e. Install strain relief in hole in the back of outlet box.
- f. Attach outlet box to control box inset panel with the provided hex head screws.
- g. Insert 110 volt power wiring through strain in back of outlet box, allow enough wire to attach GFCI receptacle.
- h. Attach 110 volt power wiring to GFCI receptacle.
- i. Place receptacle in outlet box and attach with provided screws.
- j. Install receptacle gasket and cover.
- k. Reinstall control box access cover.

FIGURE 1

