

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R951V 040 3 A 17	R951V 060 3 A 17	R951V 070 3 A 17	R951V 070 5 A 21
-----	-------	---	------------------------------	------------------------------	------------------------------	------------------------------

**HEAT EXCHANGER, BURNER / MANIFOLD**

40	Stk	Heat Exchanger Assembly	<a href="#">AS-104120-01</a>	<a href="#">AS-104120-02</a>	<a href="#">AS-104120-05</a>	<a href="#">AS-104120-24</a>
41a	Stk	Collector Box Kit (includes Collector Box, Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	<a href="#">68-104111-81</a>	<a href="#">68-104111-84</a>	<a href="#">68-104111-85</a>	<a href="#">68-104111-91</a>
41b	Stk	Collector Box Gasket	<a href="#">68-103546-03</a>	<a href="#">68-103546-03</a>	<a href="#">68-103546-03</a>	<a href="#">68-103546-02</a>
41c		Rubber Plug (2)	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>
41d		Vinyl Cap	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>
41e	Stk	Water Sensor (2)	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>
41f		O-Ring (fits over tap and seats on Collector Box)	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>
42		Burner Assembly (Rack, Cover, Burner Halves, Ignitor Bracket)	<a href="#">AS-104123-41*</a>	<a href="#">AS-104123-42*</a>	<a href="#">AS-104123-43*</a>	<a href="#">AS-104123-43*</a>
43		Burner Rack (One Piece Assembly)	<a href="#">AE-104121-01</a>	<a href="#">AE-104121-02</a>	<a href="#">AE-104121-03</a>	<a href="#">AE-104121-03</a>
44		Burner Rack Cover	<a href="#">AE-104122-01</a>	<a href="#">AE-104122-02</a>	<a href="#">AE-104122-03</a>	<a href="#">AE-104122-03</a>
44a		Screw - Burner Cover (2)	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>
45		Igniter Bracket	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>
45a		Bracket (Limit - Manual Reset)	N/A	N/A	N/A	N/A
46	Stk	Burner	<a href="#">AS-61984-13*</a>	<a href="#">AS-61984-14*</a>	<a href="#">AS-61984-15*</a>	<a href="#">AS-61984-15*</a>
46a		Screw - Burner to Burner Rack	<a href="#">63-22153-05</a> (5)	<a href="#">63-22153-05</a> (6)	<a href="#">63-22153-05</a> (7)	<a href="#">63-22153-05</a> (7)
47		Manifold (w/o Orifices)	<a href="#">81-104526-01</a>	<a href="#">81-104526-02</a>	<a href="#">81-104526-03</a>	<a href="#">81-104526-03</a>
		Burner Orifice - Natural Gas	See Orifice Selection Chart			
		Burner Orifice - LP	See Orifice Selection Chart			
		Number of Orifices	(3)	(4)	(5)	(5)

No.	Notes	MODEL INPUT AIRFLOW DESIGN SERIES CABINET WIDTH	R951V 085 5 A 21	R951V 100 5 A 21	R951V 115 5 A 24
-----	-------	---	------------------------------	------------------------------	------------------------------

**HEAT EXCHANGER, BURNER / MANIFOLD**

40	Stk	Heat Exchanger Assembly	<a href="#">AS-104120-17</a>	<a href="#">AS-104120-15</a>	<a href="#">AS-104120-21</a>	
41a	Stk	Collector Box Kit (includes Collector Box, Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	<a href="#">68-104111-86</a>	<a href="#">68-104111-82</a>	<a href="#">68-104111-83</a>	
41b	Stk	Collector Box Gasket	<a href="#">68-103546-02</a>	<a href="#">68-103546-02</a>	<a href="#">68-103546-01</a>	
41c		Rubber Plug (2)	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	
41d		Vinyl Cap	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	
41e	Stk	Water Sensor (2)	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	
41f		O-Ring (fits over tap and seats on Collector Box)	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	
42		Burner Assembly (Rack, Cover, Burner Halves, Ignitor Bracket)	<a href="#">AS-104123-44*</a>	<a href="#">AS-104123-45*</a>	<a href="#">AS-104123-46*</a>	
43		Burner Rack (One Piece Assembly)	<a href="#">AE-104121-04</a>	<a href="#">AE-104121-05</a>	<a href="#">AE-104121-06</a>	
44		Burner Rack Cover	<a href="#">AE-104122-04</a>	<a href="#">AE-104122-05</a>	<a href="#">AE-104122-06</a>	
44a		Screw - Burner Cover (2)	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	
45		Igniter Bracket	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	
45a		Bracket (Limit - Manual Reset)	N/A	N/A	<a href="#">AE-61913-02</a>	
46	Stk	Burner	<a href="#">AS-61984-16*</a>	<a href="#">AS-61984-17*</a>	<a href="#">AS-61984-18*</a>	
46a		Screw - Burner to Burner Rack	<a href="#">63-22153-05</a> (8)	<a href="#">63-22153-05</a> (9)	<a href="#">63-22153-05</a> (10)	
47		Manifold (w/o Orifices)	<a href="#">81-104526-04</a>	<a href="#">81-104526-05</a>	<a href="#">81-104526-06</a>	
		Burner Orifice - Natural Gas	See Orifice Selection Chart			
		Burner Orifice - LP	See Orifice Selection Chart			
		Number of Orifices	(6)	(7)	(8)	

No.	Notes	MODEL GAS CODE	R951V KU
-----	-------	-------------------	-------------

**GAS CONTROLS**

50	Stk	Gas Valve - Natural Gas	<a href="#">60-103901-01</a>
----	-----	-------------------------	------------------------------

	Stk,2	Gas Valve - LP		See Note 2		
51	Stk	M1 Single Stage Furnace Control (IFC)		<a href="#">62-108462-02*</a>		
	Stk	3A Mini Fuse (Control Board)		<a href="#">ATM-3-5PK</a>		
52	Stk	Flame Sensor		<a href="#">62-23543-08</a>		
53	Stk	Spark Ignitor		<a href="#">62-24141-05</a>		
	Stk	LP Conversion Kit - U.S./Canadian Models		<a href="#">FP-38</a>		