

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATIONS AIRFLOW FUEL DESIGNATION	R96TA	R96TA	R96TA	R96TA	R96TA
			040 2 3 17 MSA	060 2 3 17 MSA	070 2 3 17 MSA	070 2 5 21 MSA	085 2 5 21 MSA
<b>HEAT EXCHANGER, BURNER / MANIFOLD GROUP</b>							
40	Stk	Heat Exchanger Assembly	<a href="#">AS-104120-01</a>	<a href="#">AS-104120-10</a>	<a href="#">AS-104120-31</a>	<a href="#">AS-104120-24</a>	<a href="#">AS-104120-18</a>
41a	Stk	Collector Box Kit (includes Collector Box Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	<a href="#">68-104111-81</a>	<a href="#">68-104111-95</a>	<a href="#">68-104111-96</a>	<a href="#">68-104111-91</a>	<a href="#">68-104111-97</a>
41b	Stk	Collector Box Gasket	<a href="#">68-103546-03</a>	<a href="#">68-103546-03</a>	<a href="#">68-103546-03</a>	<a href="#">68-103546-02</a>	<a href="#">68-103546-02</a>
41c		Rubber Plug (2)	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>
41d		Vinyl Cap	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>
41e	Stk	Water Sensor (2)	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>
41f		O-Ring (fits over tap and seats on Collector Box)	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>
42		Burner Assembly (Rack, Cover, Burner Halves, Ignitor Bracket)	<a href="#">AS-104123-01</a>	<a href="#">AS-104123-02</a>	<a href="#">AS-104123-03</a>	<a href="#">AS-104123-03</a>	<a href="#">AS-104123-04</a>
43		Burner Rack (One Piece Assembly)	<a href="#">AE-104121-01</a>	<a href="#">AE-104121-02</a>	<a href="#">AE-104121-03</a>	<a href="#">AE-104121-03</a>	<a href="#">AE-104121-04</a>
44		Burner Rack Cover	<a href="#">AE-104122-01</a>	<a href="#">AE-104122-02</a>	<a href="#">AE-104122-03</a>	<a href="#">AE-104122-03</a>	<a href="#">AE-104122-04</a>
44a		Screw - Burner Cover (2)	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>
45		Igniter Bracket	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>
45a		Bracket (Limit - Manual Reset)	N/A	N/A	N/A	N/A	N/A
46	Stk	Burner	<a href="#">AS-61984-03</a>	<a href="#">AS-61984-04</a>	<a href="#">AS-61984-05</a>	<a href="#">AS-61984-05</a>	<a href="#">AS-61984-06</a>
46a		Screw - Burner to Burner Rack	<a href="#">63-22153-05</a> (5)	<a href="#">63-22153-05</a> (6)	<a href="#">63-22153-05</a> (7)	<a href="#">63-22153-05</a> (7)	<a href="#">63-22153-05</a> (8)
47		Manifold (w/o Orifices)	<a href="#">81-104526-01</a>	<a href="#">81-104526-02</a>	<a href="#">81-104526-03</a>	<a href="#">81-104526-03</a>	<a href="#">81-104526-04</a>
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(3)	(4)	(5)	(5)	(6)

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATIONS AIRFLOW FUEL DESIGNATION	R96TA	R96TA			
			100 2 5 21 MSA	115 2 5 24 MSA			
<b>HEAT EXCHANGER, BURNER / MANIFOLD GROUP</b>							
40	Stk	Heat Exchanger Assembly	<a href="#">AS-104120-19</a>	<a href="#">AS-104120-21</a>			
41a	Stk	Collector Box Kit (includes Collector Box Gasket, Rubber Plugs, Water Sensors, O-Ring, Vinyl Cap, IDB Gasket and Mounting Screws)	<a href="#">68-104111-98</a>	<a href="#">68-104111-83</a>			
41b	Stk	Collector Box Gasket	<a href="#">68-103546-02</a>	<a href="#">68-103546-01</a>			
41c		Rubber Plug (2)	<a href="#">56-104377-01</a>	<a href="#">56-104377-01</a>			
41d		Vinyl Cap	<a href="#">56-103685-01</a>	<a href="#">56-103685-01</a>			
41e	Stk	Water Sensor (2)	<a href="#">47-104184-01</a>	<a href="#">47-104184-01</a>			
41f		O-Ring (fits over tap and seats on Collector Box)	<a href="#">68-104386-02</a>	<a href="#">68-104386-02</a>			
42		Burner Assembly (Rack, Cover, Burner Halves, Ignitor Bracket)	<a href="#">AS-104123-05</a>	<a href="#">AS-104123-06</a>			
43		Burner Rack (One Piece Assembly)	<a href="#">AE-104121-05</a>	<a href="#">AE-104121-06</a>			
44		Burner Rack Cover	<a href="#">AE-104122-05</a>	<a href="#">AE-104122-06</a>			
44a		Screw - Burner Cover (2)	<a href="#">63-22153-01</a>	<a href="#">63-22153-01</a>			
45		Igniter Bracket	<a href="#">AE-61885-02</a>	<a href="#">AE-61885-02</a>			
45a		Bracket (Limit - Manual Reset)	N/A	<a href="#">AE-61913-02</a>			
46	Stk	Burner	<a href="#">AS-61984-07</a>	<a href="#">AS-61984-08</a>			
46a		Screw - Burner to Burner Rack	<a href="#">63-22153-05</a> (9)	<a href="#">63-22153-05</a> (10)			
47		Manifold (w/o Orifices)	<a href="#">81-104526-05</a>	<a href="#">81-104526-06</a>			
		Burner Orifice - Natural Gas	See Orifice Selection Chart				
		Burner Orifice - LP	See Orifice Selection Chart				
		Number of Orifices	(7)	(8)			

No.	Notes	MODEL GAS CODE	R96TA			
			KD			
<b>GAS CONTROLS</b>						
50	Stk	Gas Valve - Natural Gas	<a href="#">60-101921-05</a>			
	Stk,2	Gas Valve - LP	See Note 2			
51	Stk	Integrated Furnace Control Board (IFC)	<a href="#">62-106321-01</a>			

52	Stk	Flame Sensor	<a href="#">62-23543-08</a>				
53	Stk	Spark Ignitor	<a href="#">62-24141-05</a>				
	Stk	LP Conversion Kit - U.S./Canadian Models	<a href="#">FP-34</a>				