

# Universal AHU (Electric Heat / Heat Pump), Heat Pump Thermostat

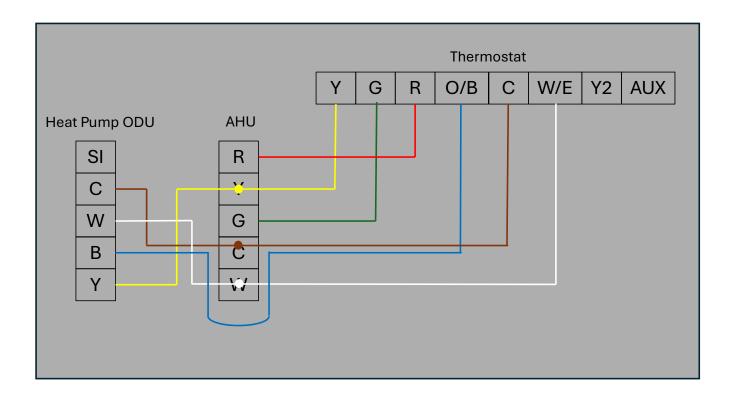


# Single Stage Furnace (Dual Fuel Application), Smart Wi-Fi Heat Pump Thermostat

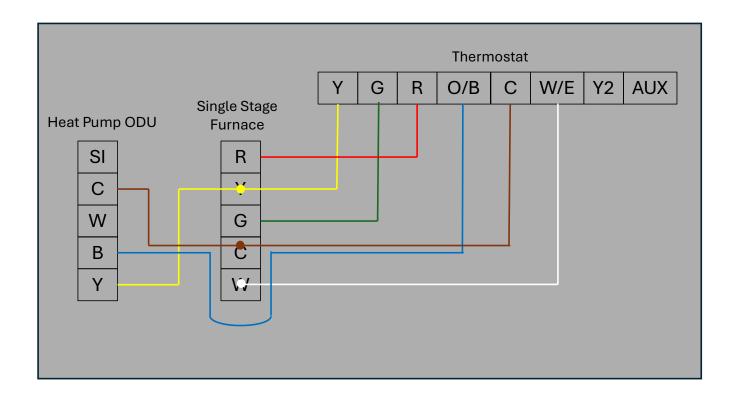


<sup>\*</sup>Thermostat controls dual fuel application. Smart Wi-Fi required for Outside Temperature input


Two Stage Furnace (Dual Fuel Application), Dual Fuel Thermostat Control

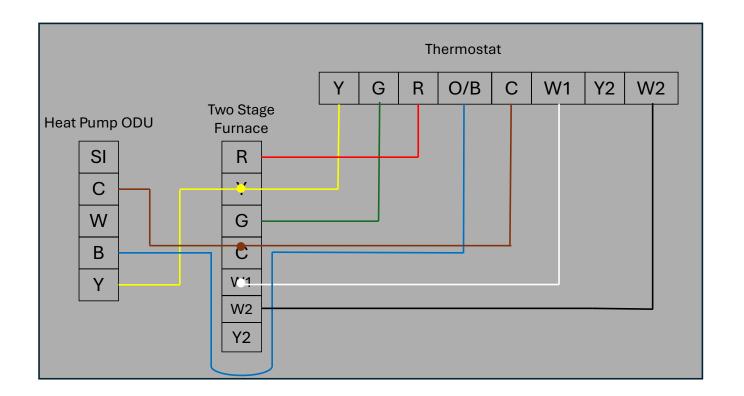


<sup>\*</sup>Thermostat controls dual fuel application. Smart Wi-Fi required for Outside Temperature input

# Single Stage Gas Furnace (Heat pump operating as A/C only), Heat/Cool Thermostat

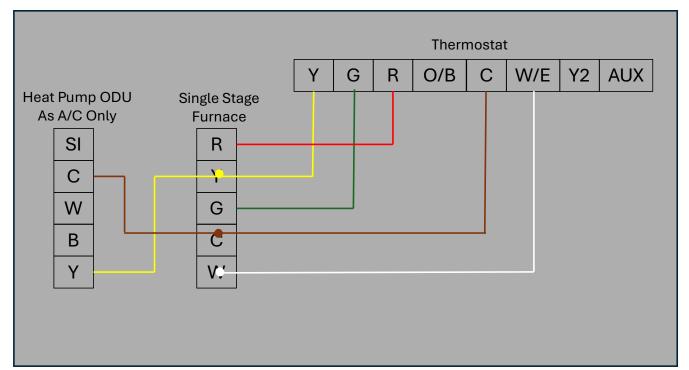

 

# Cooling Only AHU (With Electric Heat), Standard Heat / Cool Thermostat

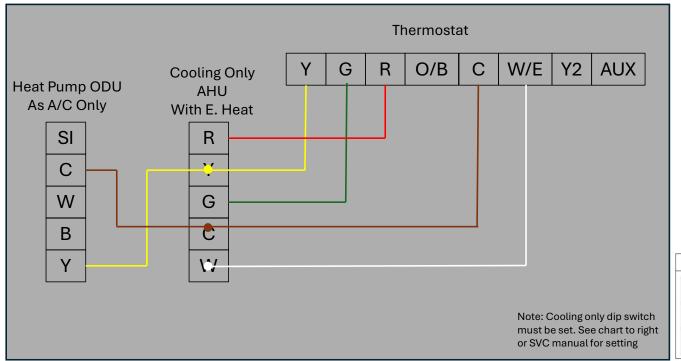

S4 DIP Switch Setting		S5 DIP Switch Setting	
Factory Setting	ON OFF 1 2 3 4	Factory Setting	ON OFF 1 2 3 (
Pump Down Switch	ON 00FF 1 2 3 4	Capacity High→Low	ON 0FF 1 2 3 4
Force Defrost	ON OFF 1 2 3 4	Cooling Only	ON OFF

## Cooling Only AHU (Without Electric Heat), Standard Heat / Cool Thermostat

