

The new degree of comfort.

# Endeavor<sup>™</sup> Line *Prestige*<sup>®</sup> Series Gas Furnaces





This product meets a stringent set of our internally defined sustainability standards



# **R97MV**

97% A.F.U.E.† EcoNet® Enabled Heating Stages: Modulating Motor Type: Constant CFM Input Rates: 60 to 115 kBTU [11.6 to 33.7 kW] Configuration Options: Downflow/Horizontal











† A.F.U.E. (Annual Fuel Utilization Efficiency) calculated in accordance with Department of Energy test procedures.

# **Table of Contents**

Features & Benefits	3
Model Number Identification	4
Physical Data and Specifications	5
Dimensional Data	6
Blower Performance Data	7
Accessories	8-9
Limited Warranty	12

## **Features and Benefits**

- **PlusOne® Energy Efficiency:** ENERGY STAR® certified, featuring 97% AFUE across all model sizes
- PlusOne<sup>®</sup> Diagnostics: Industry first, 7-Segment LED Display makes service calls quick and easy
- **PlusOne® Ignition System:** Proven Direct Spark Ignition (DSI) for reliability and longevity
- PlusOne® Water Management System: Exclusive patented block drain sensor that automatically shuts off the furnace when the drain is blocked and alerts the contractor via diagnostic code
- **Modulating Heating Stage:** Gradual auto-adjustment from low to 100% of capacity to meet precise comfort requirements

- **Constant CFM Motor:** Truly variable speed technology allows for ultimate humidity control, quieter sounds levels and year-round energy savings
- Quietest Operation1: A fully insulated blower cabinet, solid bottom and truly variable speed airflow technology makes this furnace of the quietest available
- EcoNet<sup>®</sup> Enabled Furnace: The latest in sensor technology and the EcoNet<sup>®</sup> monitoring system provides a new level of protection, control and energy savings
- Allows on-the-go control and receipt of system alerts by the homeowner via the EcoNet<sup>®</sup> Smart Thermostat and EcoNet<sup>®</sup> App<sup>2</sup>

<sup>1</sup>Based on manufacturer's furnace offering, and the product's heating stages, motor type and cabinet insulation. Sound levels are also dependent on furnace location and installation.

<sup>2</sup>Wifi broadband internet connection required. Download the EcoNet<sup>®</sup> App from the App Store<sup>®</sup> or Google Play<sup>®</sup> to set up your EcoNet<sup>®</sup> Smart Thermostat. Receipt of notifications depend on home WiFi set up. Amazon, Alex and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

# **Gas Furnaces**

R	<u>97</u>	M	v	060	<u>3</u>	A	<u>17</u>	DH	<u>s</u>	<u>G</u>	A	<u>P</u>
Brand	Furnace Efficiency	Stages of Heating	Motor Type	Heating Input	AC Max. Capacity	Major Series	Width	Position	NOx	Controls	Minor Series	Option Code
R - Rheem	97 - 97% AFUE	M - Modulating	V - ECM Variable Speed		3 - 3 Ton Drive 5 - 5 Ton Drive	A - 1st Design Series	17 - 17.5" Width 21 - 21" Width 24 - 24.5" Width	Downflow		G - Communicating, EcoNet®	A - 1st Series	P - Premium Grade

#### [ ] Designates Metric Conversions

AVAILABLE MODELS	
R97MV0603A17DHSGAP	
R97MV0703A17DHSGAP	
R97MV0855A21DHSGAP	
R97MV1005A21DHSGAP	
R97MV1155A24DHSGAP	

STANDARD EQUIPMENT
100% Safety Lock Out
29-4C Stainless Steel Secondary Heat Exchanger Design
7 Segment LED
Adjustable Cool Fan Off Delay
Adjustable Heat Fan Off Delay
Aluminized Steel Primary Heat Exchanger Design
Blocked Drain Sensor
Blower Compartment Door Safety Switch
Completely Assembled and Wired
Direct Drive Motor
Econet Thermostat Connections (Enables Modulating Heat)
Electronic Air Cleaner Connections
Flame Sense Current Diagnostics
Fully Insulated Heat Exchanger Cabinet
Humidifier Connections
Humidifier On/Off Delay
Limit Controls
Low Speed Continuous Fan Option
Manual Shut-Off Valve
Marked Condensate Hoses
Modulating Redundant Main Gas Control
One Hour Automatic Retry
Power and Self-Test Diagnostics
Pressure Switches
Solid State time on/Off Blower Control
Blower Insulation
Transformer
Two Plus* Stage Cooling Thermostat Connection
Two Stage Heating Thermostat Connection (Three Stage Heating Operation)
Variable Speed 3 Phase Induced Draft Motor
Variable Speed Electrically Commutated Blower Motor (ECM)

 $^{\ast}$  When Connected to Three Speed or Modulating AC/HP Product

WARNING THIS FURNACE IS NOT APPROVED OR RECOMMENDED FOR USE IN MOBILE HOMES

### **Physical Data and Specifications** U.S. and Canadian Models

MODEL NUMBER	R97MV0603	R97MV0703	R97MV0855	R97MV1005	R97MV1155
	A17DHSGAP	A17DHSGAP	A21DHSGAP	A21DHSGAP	A24DHSGAP
HIGH FIRE INPUT BTU/HR [kW]	56,000 [16.41]	70,000 [20.50]	84,000 [24.61]	98,000 [28.72]	112,000 [32.82]
LOW FIRE INPUT	22,400 [6.56]	28,000 [8.21]	33,600 [9.85]	39,200 [11.49]	44,800 [13.13]
HEATING CAPACITY BTU/HR [kW]	54,320 [15.92]	67,900 [19.89]	81,480 [23.87]	96,060 [27.85]	108,640 [31.83]
BLOWER (D x W) [mm]	11 x 8	11 x 8	11 x 10	11 x 10	11 x 11
	[279 x 203]	[279 x 203]	[279 x 254]	[279 x 254]	[279 x 279]
MOTOR H. P. [W]-TYPE	1/2 [373] E. C. M.	1/2 [373] E. C. M.	3/4 [559] E. C. M.	3/4 [559] E. C. M.	3/4 [559] E. C. M.
MIN. CIRCUIT AMPACITY	10.00	10.00	12.00	13.00	12.00
MIN. OVERLOAD PROTECTION DEVICE	15.00	15.00	15.00	15.00	15.00
MAX. OVERLOAD PROTECTION DEVICE	15.00	15.00	20.00	20.00	20.00
MAXIMUM EXT. STATIC PRESSURE	1.0	1.0	1.0	1.0	1.0
IN. W.C. [kPa]	[.249]	[.249]	[.249]	[.249]	[.249]
MAXIMUM HEATING CFM	954	1109	1062	1250	1628
[L/s]	[450]	[523]	[501]	[590]	[769]
COOLING CFM @ .50" W.C. [.124 kPa]	1050	1050	1750	1750	1750
E.S.P. [L/s]	[496]	[496]	[825]	[825]	[825]
TEMPERATURE RISE- HIGH FIRE °F	40 - 70	40 - 70	50 - 80	50 - 80	40 - 70
[°C]	[22 -39]	[22 -39]	[27 -44]	[27 -44]	[22 -39]
TEMPERATURE RISE- LOW FIRE °F	20 - 50	20 - 50	20 - 50	20 - 50	20 - 50
[°C]	[11 - 28]	[11 - 28]	[11 - 28]	[11 - 28]	[11 - 28]
APPROX. SHIPPING WEIGHT (LBS)	128	132	147.5	152	165
[kg]	[58]	[60]	[67]	[69]	[75]
AFUE ①	97.00%	97.00%	97.00%	97.00%	97.00%

NOTES: All models are 115V, 60HZ, 1 phase Gas connection size for all models is 1/2" [13 mm] N.P.T.

① In accordance with D.O.E. test procedures.

\*S=Standard Models


Standard model complies with California low NOx requirements.

This furnace does not meet air district requirements of 14 ng/J NOx emissions limit.

This furnace is to be installed for propane firing only in air districts requiring 14 ng/J NOx emission limits. Operating in natural gas mode is in violation of these Rules.

#### [ ] Designates Metric Conversions

# **Downflow Horizontal Applications**

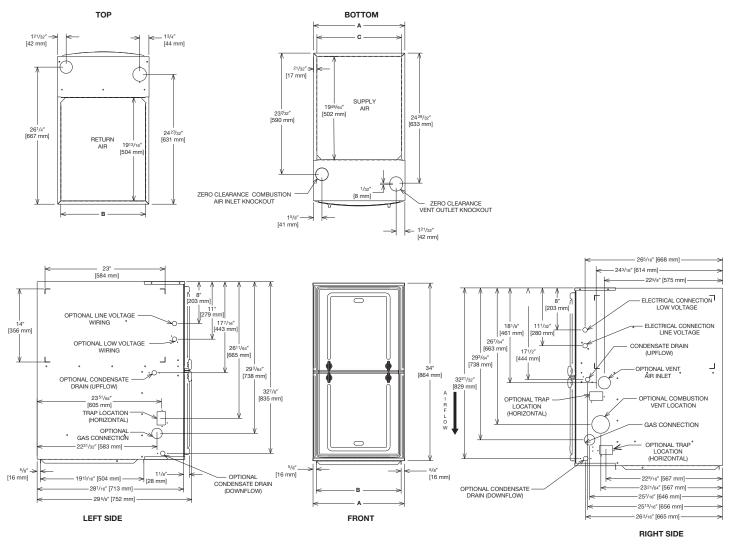

ST-A1250-03-00

### **Unit Dimensions (Clearance to Combustibles)**

MODEL	LEFT	MINIMUM CLEARANCE (IN.) [mm]						
R97MV	SIDE	RIGHT SIDE	BACK	ТОР	FRONT	VENT		
60	0	0	0	1 [25]	2 [51]	0		
70	0	0	0	1 [25]	2 [51]	0		
85	0	0	0	1 [25]	2 [51]	0		
100	0	0	0	1 [25]	2 [51]	0		
115	0	0	0	1 [25]	2 [51]	0		

\*A service clearance of at least 24" is recommended in front of all furnaces

#### [ ] Designates Metric Conversions

FLANGE DIMENSIONS							
A B C							
171/2 [445]	16 <sup>17/64</sup> [413]	16 <sup>13/64</sup> [412]					
21 [533]	19 <sup>49/64</sup> [502]	19 <sup>45</sup> /64 [500]					
241/2 [662]	2317/64 [591]	2313/64 [589]					

Supply and return depicted as downflow configuration. Flange configuration will vary depending on installation orientation.

## **Blower Performance Data**

Comfort Select – CFM Options (factory setting)								
Model N	lumber	(-)97V(-)060M317K()	(-)97V(-)070M317K()	(-)97V(-)085M521K	(-)97V(-)100M521K()	(-)97V(-)115M524K()		
	LOW HEAT (40%)	428 [202]	466 [220]	579 [276]	683 [322]	778 [367]		
HEATING CFM [L/s]	MEDIUM HEAT (65%)	562 [265]	635 [300]	685 [323]	807 [381]	990 [467]		
	HIGH HEAT (100%)	749 [353]	871 [411]	833 [393]	982 [463]	1286 [607]		
Efficiency Select – CFM Options								
	LOW HEAT (40%)	550 [260]	599 [283]	745 [352]	910 [429]	1000 [472]		
HEATING	MEDIUM HEAT (65%)	690 [325]	778 [367]	845 [399]	1014 [479]	1217 [574]		
CFM [L/s]	HIGH HEAT (100%)	885 [418]	1029 [486]	985 [465]	1160 [547]	1520 [717]		
	MAX HEAT (-4°F)	954 [450]	1109 [524]	1067 [501]	1251 [590]	1628 [769]		

\*S = Standard Models NOTES Standard model complies with California low NOx requirements. Refer to Installation Manual for complete heating dip switch options.

					COOLING CFM			
	Model Nur	nber		R97MV0603 A17DHSGAP	R97MV0703 A17DHSGAP	R97MV0855 A21DHSGAP	R97MV1005 A21DHSGAP	R97MV1155 A24DHSGAP
		SW 4 = OFF	SW 5 = OFF	1050 [496]	1050 [496]	1750 [825]	1750 [825]	1750 [825]
	HIGH COOLING CFM [L/s]	SW 4 = 0N	SW 5 = OFF	875 [413]	875 [413]	1400 [661]	1400 [661]	1400 [661]
		SW 4 = OFF	SW 5 = ON	700 [330]	700 [330]	1225 [578]	1225 [578]	1225 [578]
TARGET COOLING/ HEAT		SW 4 = 0N	SW 5 = ON	525 [248]	525 [248]	1050 [496]	1050 [496]	1050 [496]
PUMP		SW 4 = OFF	SW 5 = OFF	788 [372]	788 [372]	1313 [619]	1313 [619]	1313 [619]
	LOW COOLING CFM [L/s]	SW 4 = 0N	SW 5 = OFF	656 [310]	656 [310]	1050 [496]	1050 [496]	1050 [496]
		SW 4 = OFF	SW 5 = ON	525 [248]	525 [248]	919 [434]	919 [434]	919 [434]
		SW 4 = 0N	SW 5 = ON	394 [185]	394 [185]	788 [372]	788 [372]	788 [372]

[ ] Designates Metric Conversions

### Vent Termination Kits: =

**RXGY-E02:** Vertical/Horizontal Concentric Vent Termination Kit 2" Pipe (US Only)

**RXGY-E02A:** Vertical/Horizontal Concentric Vent Termination Kit 2" Pipe (US & Canadian)

**RXGY-E03:** Vertical/Horizontal Concentric Vent Termination Kit 3" Pipe (US Only)

**RXGY-E03A:** Vertical/Horizontal Concentric Vent Termination Kit 3" Pipe (US & Canadian)

RXGY-G02: Direct Vent Furnace Side Wall Vent 2" or 3" (US Only)

RXGY-D05: Combustion Air Drain Kit 2"

RXGY-D06: Combustion Air Drain Kit 3"

**NEUTRALIZER KIT:** RXGY-A01 (Replacement Cartridge 54-22120-01)

EXTERNAL BOTTOM FILTER (HORIZONTAL) RACK: RXGF-CB

EXTERNAL (DOWNFLOW) FILTER RACK: RXGF-CC

FILTER RACK FILTER SIZES* INCHES [mm]						
MODEL RXGF-CB (HORIZONTAL) RXGF-CC (DOWNFLO						
(-)97(-)060	16 x 24 [40 x 61]	(2) 14 x 20 [36 x 51]				
(-)97(-)070	16 x 24 [40 x 61]	(2) 14 x 20 [36 x 51]				
(-)97(-)085	20 x 24 [51 x 61]	(2) 14 x 20 [36 x 51]				
(-)97(-)100	20 x 24 [51 x 61]	(2) 14 x 20 [36 x 51]				
(-)97(-)115	24 x 24 [61 x 61]	(2) 14 x 20 [36 x 51]				

\*Filter racks are shipped without filters.

A suitable 1" [25.4 mm] filter may be used

#### [ ] Designates Metric Conversions

#### **Indoor Coil Casings**

MODEL NUMBER
RXBC-D17A1
RXBC-D21A1
RXBC-D21B1
RXBC-D24A1

### For High Altitudes:

NOTE: Modulating furnaces require a unique 2% derate at altitudes above 2,000 feet. See Installation Instructions for details.

#### **HIGH ALTITUDE KITS**

R97MV060M317K()	RXGY-F48
R97MV070M317K()	RXGY-F49
R97MV085M521K()	RXGY-F50
R97MV100M521K()	RXGY-F51
R97MV115M524K()	RXGY-F52

L.P. CONVERSION KIT: RXGJ-FP37

CONDENSATE PUMP KIT: PROSTOCK & 1PCB151TUL

COMBUSTIBLE FLOOR BASE: RXGC-B17 RXGC-B21 RXGC-B24



# **THE ECONET® SMART THERMOSTAT**

BUILT-IN WIFI
4.3" LCD TOUCH SCREEN
LOCAL WEATHER – Current conditions plus 6-day forecast
5 OPERATING MODES – Heat, Cool, Auto, Emergency Heat and Fan Only
7-DAY PROGRAMMABLE SCHEDULE – Offers comfort without thought
ONE-TOUCH AWAY – Quickly switch to your energy-saving away preferences
VACATION SCHEDULING – Allows you to save while you're away and come home to comfort

### **OPERATIONAL FEATURES**

AUTOMATIC CHANGEOVER – Transitions between heating and cooling automatically to keep the house comfortable INTEGRATED WATER CONTROL – Enables easy water heater management SMOOTH ARRIVAL – Prompts the system to start ahead of schedule to ensure the home is at the desired temperature at the scheduled time HUMIDITY CONTROL – Supports humidifier accessories or over-cool based dehumidification DETAILED OPERATING STATUS – View pertinent equipment status information and run times CONTINUOUS FAN – Offers 5 speeds (Low, Medium Low, Medium, Medium High, High) SHORT-CYCLE PROTECTION – Avoids damage to equipment from short run cycles

# **MONITORING & REMOTE CONTROL FEATURES**

ACTIVE MONITORING – Alerts to problems that need immediate attention REMOTE CONTROL – Allows adjusting of comfort and settings from anywhere using a mobile device SERVICE ALERTS – Sends routine maintenance reminders AIR FILTER MONITORING – Detects when it's time to replace the air filter ALARM HISTORY – Displays time-stamped alarm codes with clear descriptions



**RETST800SYS** 

Notes **R97MV** 

Notes **R97MV** 



#### **GENERAL TERMS OF LIMITED WARRANTY\***

Rheem will furnish a replacement for any part of this product which fails in normal use and service within the applicable period stated, in accordance with the terms of the limited warranty.

\*For complete details of the Limited and Conditional Warranties, including applicable terms and conditions, contact your local contractor or the Manufacturer for a copy of the product warranty certificate.

Conditional Unit Replacement	
(Registration Required)	Limited Lifetime
Heat Exchanger	Limitied Lifetime
Parts	Ten (10) Years

Before proceeding with installation, refer to installation instructions packaged with each model, as well as complying with all Federal, State, Provincial, and Local codes, regulations, and practices.

© 2023 Rheem Manufacturing Company. Rheem trademarks owned by Rheem Manufacturing Company.

In keeping with its policy of continuous progress and product improvement, Rheem reserves the right to make changes without notice.

Rheem Heating, Cooling & Water Heating • 5600 Old Greenwood Road Fort Smith, Arkansas 72908 • www.rheem.com Rheem Canada Ltd./Ltée • 125 Edgeware Road, Unit 1 Brampton, Ontario • L6Y 0P5 • rheem.ca